

UNION EXHIBIT 10



**INTERNATIONAL**

Exhibit 26

Heavy

2000

5000

8000

9000

 
**Operator's Manual**

- Do Not Remove This Manual From Vehicle
- Study Manual Carefully Before Operating Vehicle
- Pay Close Attention to All Notes & Cautions
- Carefully Read and Fully Follow All Warnings
- If You Sell The Vehicle Give The Manual To The New Owner

*Section B: Operation*

---

**GROSS WEIGHT (AXLE - VEHICLE)**



Your International truck has gross axle weight, gross vehicle weight and gross combination weight ratings. Do not exceed these ratings. Exceeding these ratings by overloading can cause component failure resulting in property damage, personal injury or death.

# To The Owner

## CAUTIONS AND WARNINGS

Throughout this manual you will find Cautions and Warnings:

### CAUTION

Cautions will advise you of the proper care to be taken to avoid damage to your vehicle or property.

### WARNING

Warnings will advise you of the proper care to be taken, not only to avoid damage to your vehicle or property, but to help prevent situations and occurrences which could cause serious personal injury and possibly death.

Study this manual carefully. Do not operate your vehicle until you are completely familiar with the contents of this manual. Always retain this manual in your vehicle for reference. If you sell the vehicle make sure the manual goes with it.

## ASSISTANCE GUIDE

When parts are required, always provide the unit code number, vehicle model and vehicle serial number. Request the salesperson to assist you in obtaining this information upon delivery.

For information not given in this manual, or if you require services of trained service personnel, we urge you to contact a nearby International® dealer.